

FSOS

Storm-Control Configuration

Contents

1. Storm-control Configuration.....	1
1.1 Storm-control Overview.....	1
1.2 Storm-Control Configuration.....	1
1.2.1 Configure Storm-Control.....	1
1.2.2 Storm-control Monitor and Maintenance.....	2

1. Storm-control Configuration

1.1 Storm-control Overview

When there is loop or malicious attacker in the network, there will be plenty of packets, which occupy the bandwidth and even affect the network. Storm-control will avoid too much packets appear in the network. Restrict the speed rate of port receiving broadcast/multicast/ unknown unicast packets and unknown unicast packets received by all ports. By default,, Broadcast storm control is Enable,default rate is 50000pps; Multicast storm control is Disable; Unicast storm control is Disable.

1.2 Storm-Control Configuration

1.2.1 Configure Storm-Control

Storm-Control configuration is configured in global configuration mode and enable/disable in interface configuration mode, that is, administrator can enable it per port.

Table 1-1 Configure Storm-control

Operation	Command	Remarks
Enter global configuration mode	configure terminal	-
Enter interface configuration mode	interface {range} Ethernet port_id (device/slot/port) <port list>	-
Configure storm-control type and rate	storm-control {broadcast multicast unicast} rate	The threshold can be <1-1000000>

1.2.2 Storm-control Monitor and Maintenance

After finishing above configuration, user can check the configurations by command below.

Table 1-2 Storm-control monitor and maintenance

Operation	Command	Remarks
Show interface	show storm-control interface <ethernet port-id>	On any configuration mode