


Port Physical Characteristics Configuration Guide

Model: S5500-48T8SP



Contents

Chapter 1 Port Physical Characteristics Configuration	1
1.1 Configuring the Ethernet Interface	1
1.1.1 Selecting Ethernet Interface	1
1.1.2 Configuring Rate	1
1.1.3 Configuring Flow Control on the Interface	1

Chapter 1 Port Physical Characteristics Configuration

1.1 Configuring the Ethernet Interface

The section describes how to configure the Ethernet interface. The switch supports the 10Mbps Ethernet and the 100Mbps fastEthernet. The detailed configuration is shown as follows. The step described in section 1.1.1 is mandatory. Steps described in other sections are optional.

1.1.1 Selecting Ethernet Interface

Run the following command in global configuration mode to enter the Ethernet interface configuration mode:

Run...	To...
interface fastethernet [slot port]	Enter the fastEthernet interface configuration mode
interface gigaethernet [slot port]	Enter the gigabit Ethernet interface configuration mode.

You can run the **show interface fastethernet** command to display the state of fastEthernet interface. You can run the **show interface gigaethernet** command to display the state of the gigabit Ethernet interface.

1.1.2 Configuring Rate

The Ethernet rate can be realized through auto-negotiation or configuration on the interface.

Run the following command to configure the Ethernet rate:

Run...	To...
Speed {10 100 1000 auto}	Set the rate of fast Ethernet to 10M, 100M, 1000M or auto-negotiation.
No speed	Resume the default settings—auto-negotiation.

Note:

The speed of the optical interface is fixed. For example, the rate of GBIC and GE-FX is 1000M; the rate of FE-FX is 100M. If the **auto** parameter is behind the **speed** command, it means that you can enable the auto-negotiation function on the optical interface. Otherwise, you cannot enable the auto-negotiation function on the optical interface.

1.1.3 Configuring Flow Control on the Interface

When the interface is in full-duplex mode, the flow control is achieved through the PAUSE frame defined by 802.3X. When the interface is in half-duplex mode, the flow control is achieved through back pressure.

Run...	To...

flow-control on/off	Enable or disable the flow control on the interface.
no flow-control	Resume the default settings. The default settings have no flow control.



 <https://www.fs.com>



The information in this document is subject to change without notice. FS has made all efforts to ensure the accuracy of the information, but all information in this document does not constitute any kind of warranty.